
zens

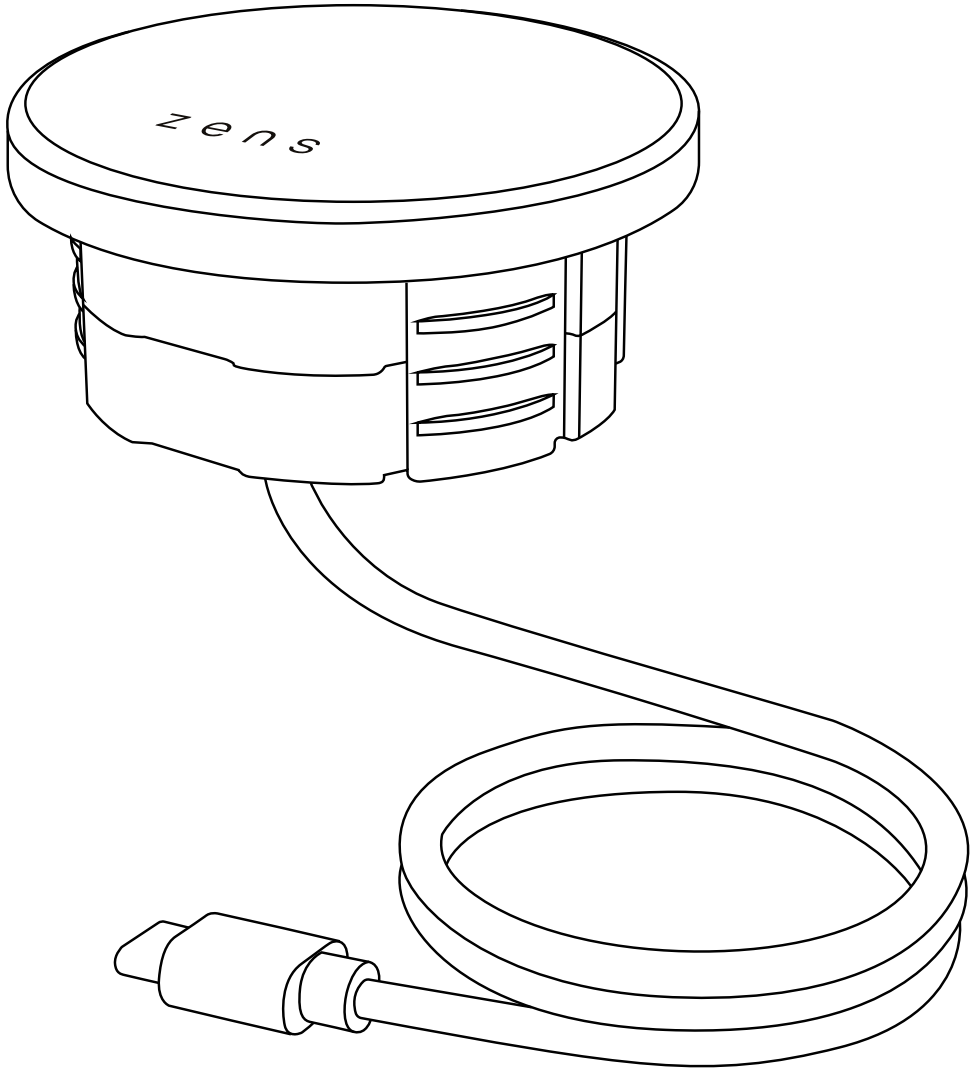


PuK 4 installation


zens.tech

Included items


a PuK 4

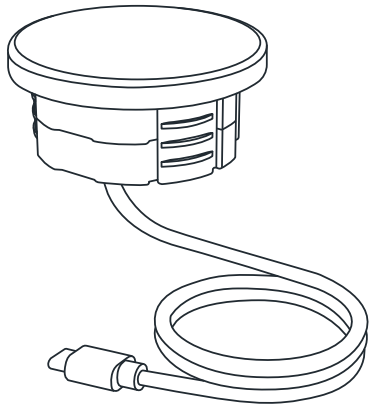

b 30W power adapter

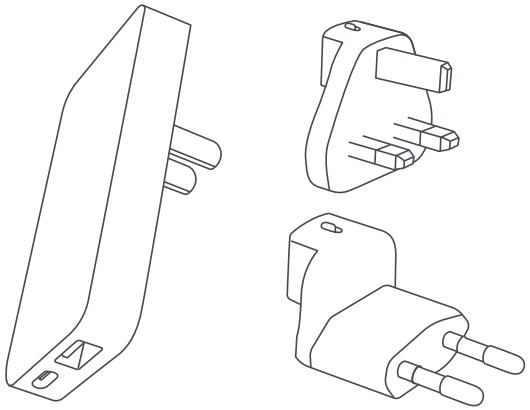


c Mounting screws

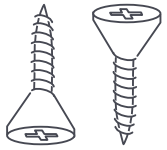

Required tools

(not included)


d Drill

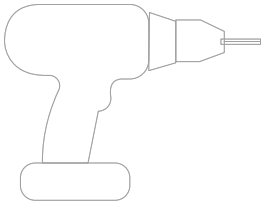


e Hole drill




f Screw driver

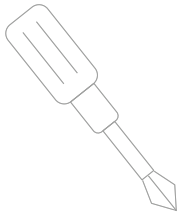


g Pencil or pen

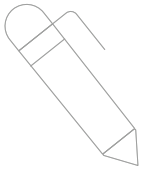


h Measuring tool

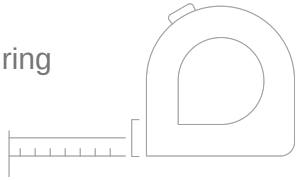

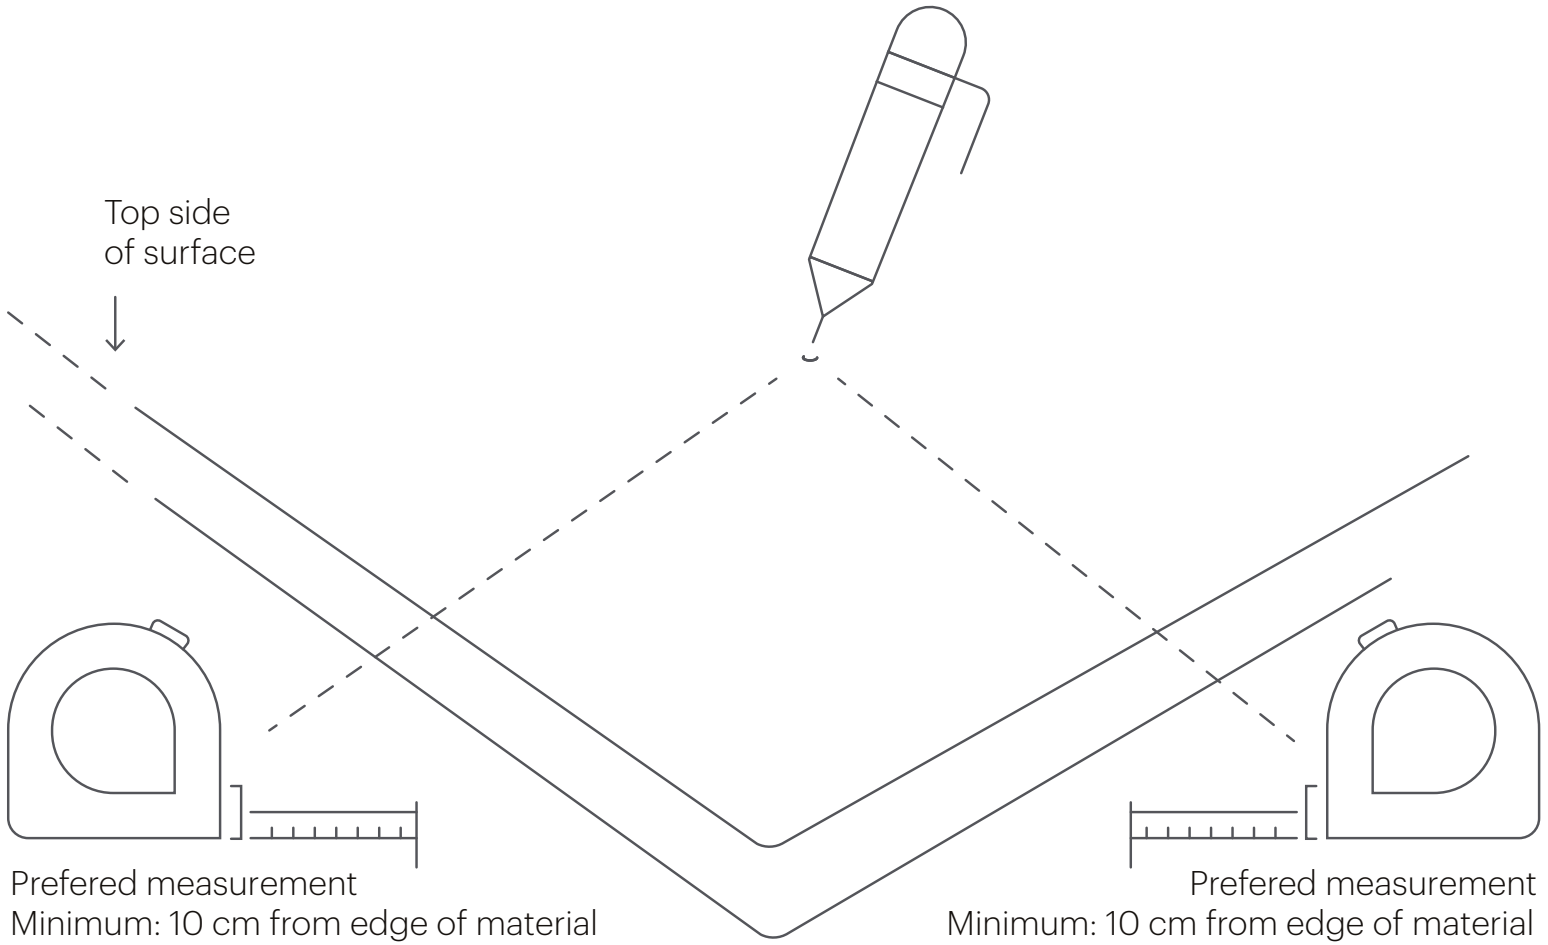


① Measure a distance with a minimum of 10 cm from the edge of the material

② Draw a little dot to indicate the drilling position

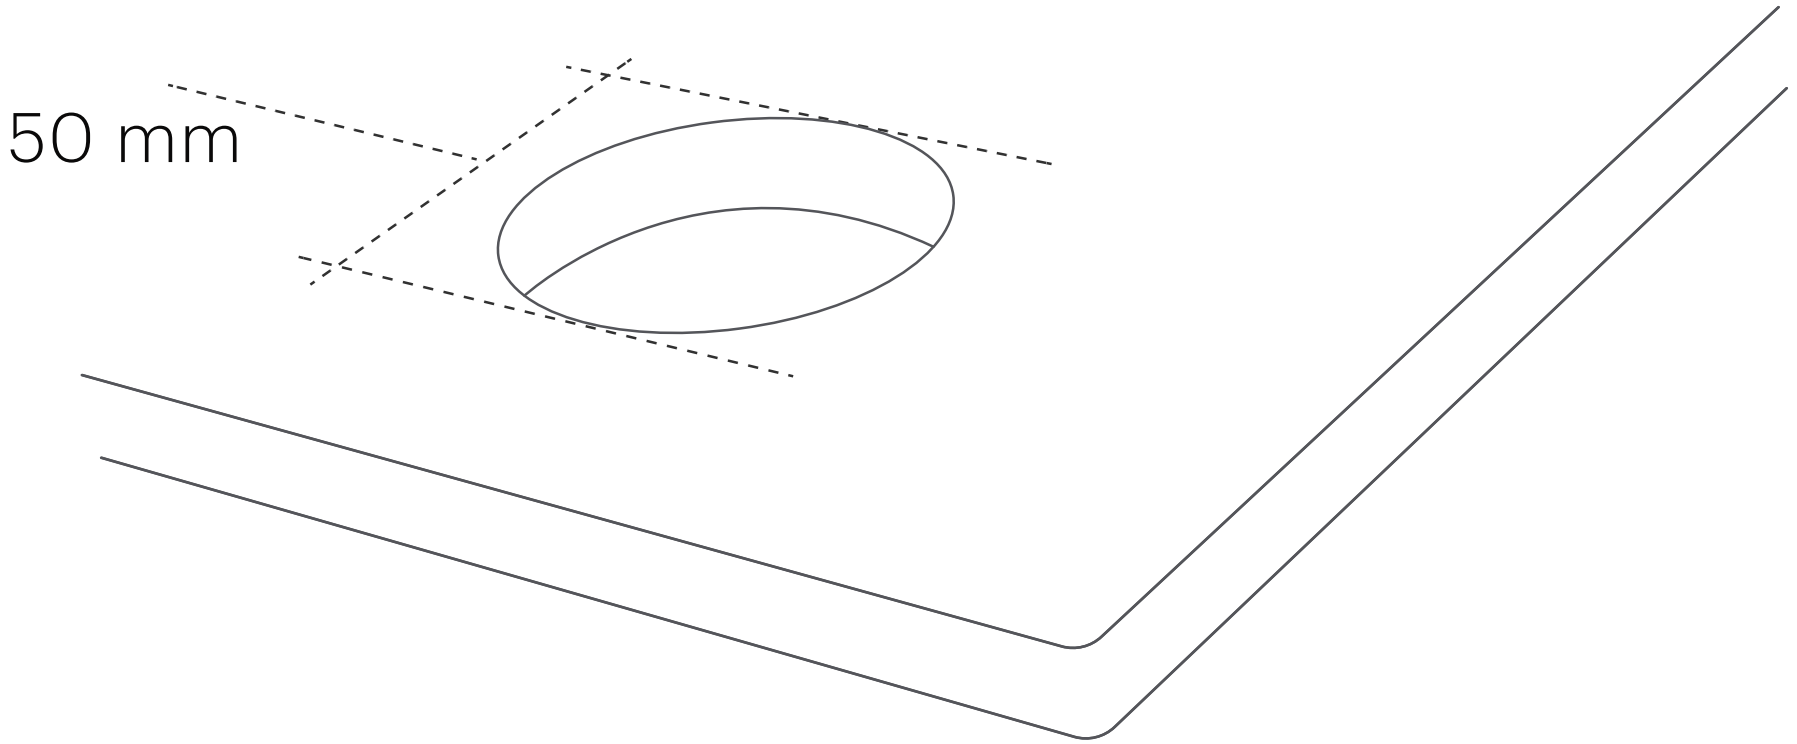


③ Drill a hole with a diameter of 50 mm in the surface at the position where the PuK 4 should be placed


Preferably use a 50 mm hole drill 

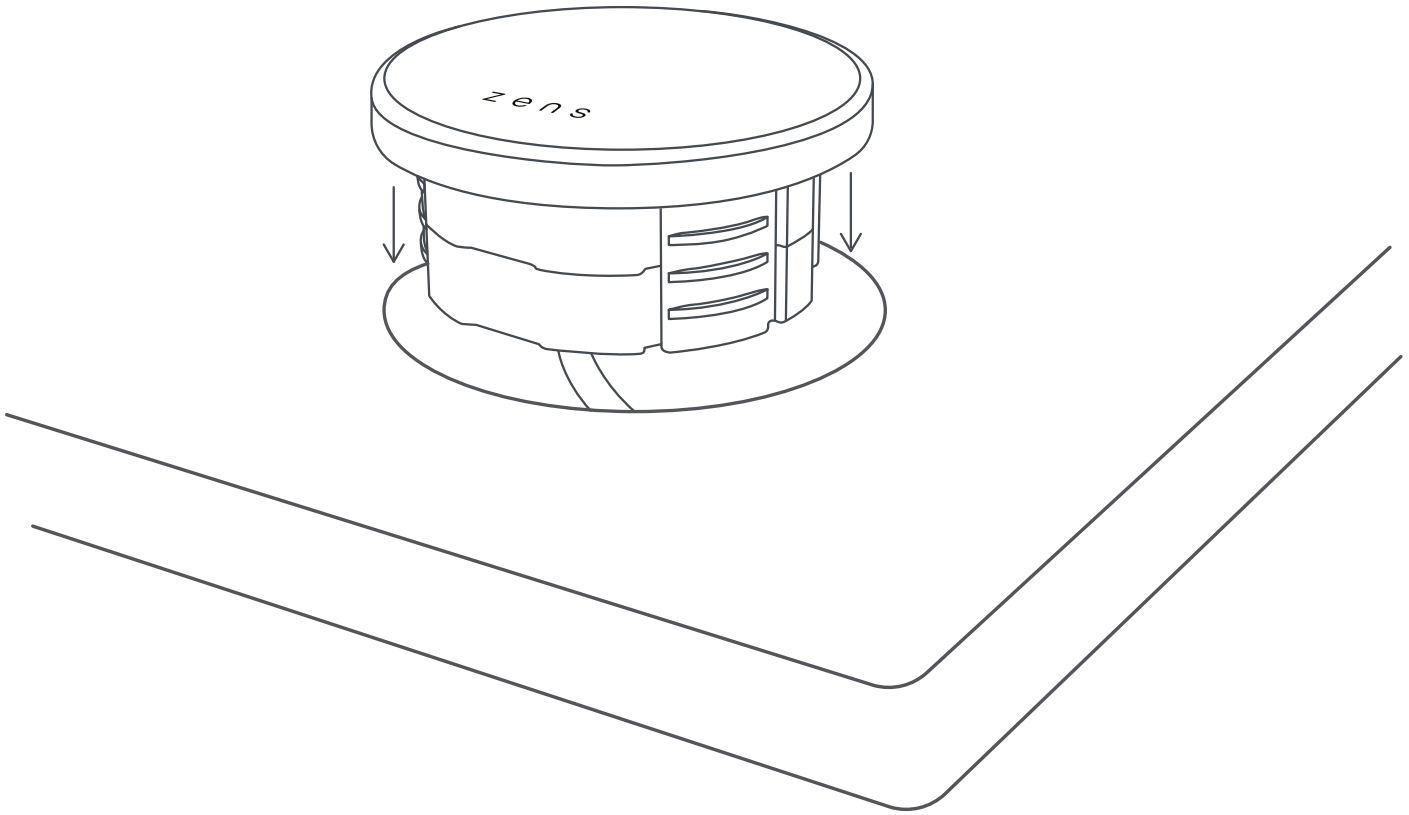


④ Insert the PuK 4 in the opening from above

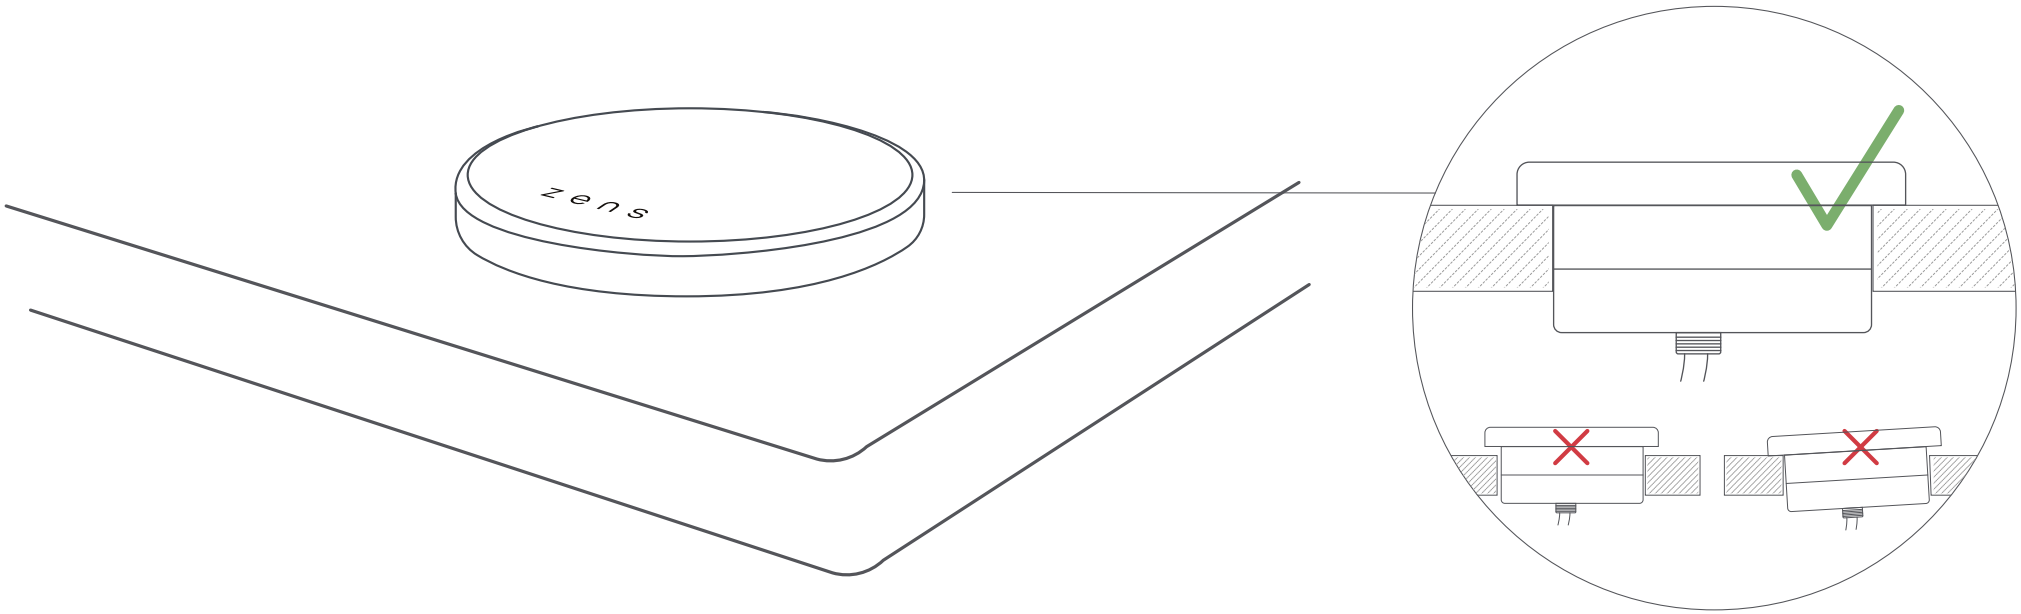


⑤ Be sure that there is no space between the topplate of the PuK 4 and the built-in surface

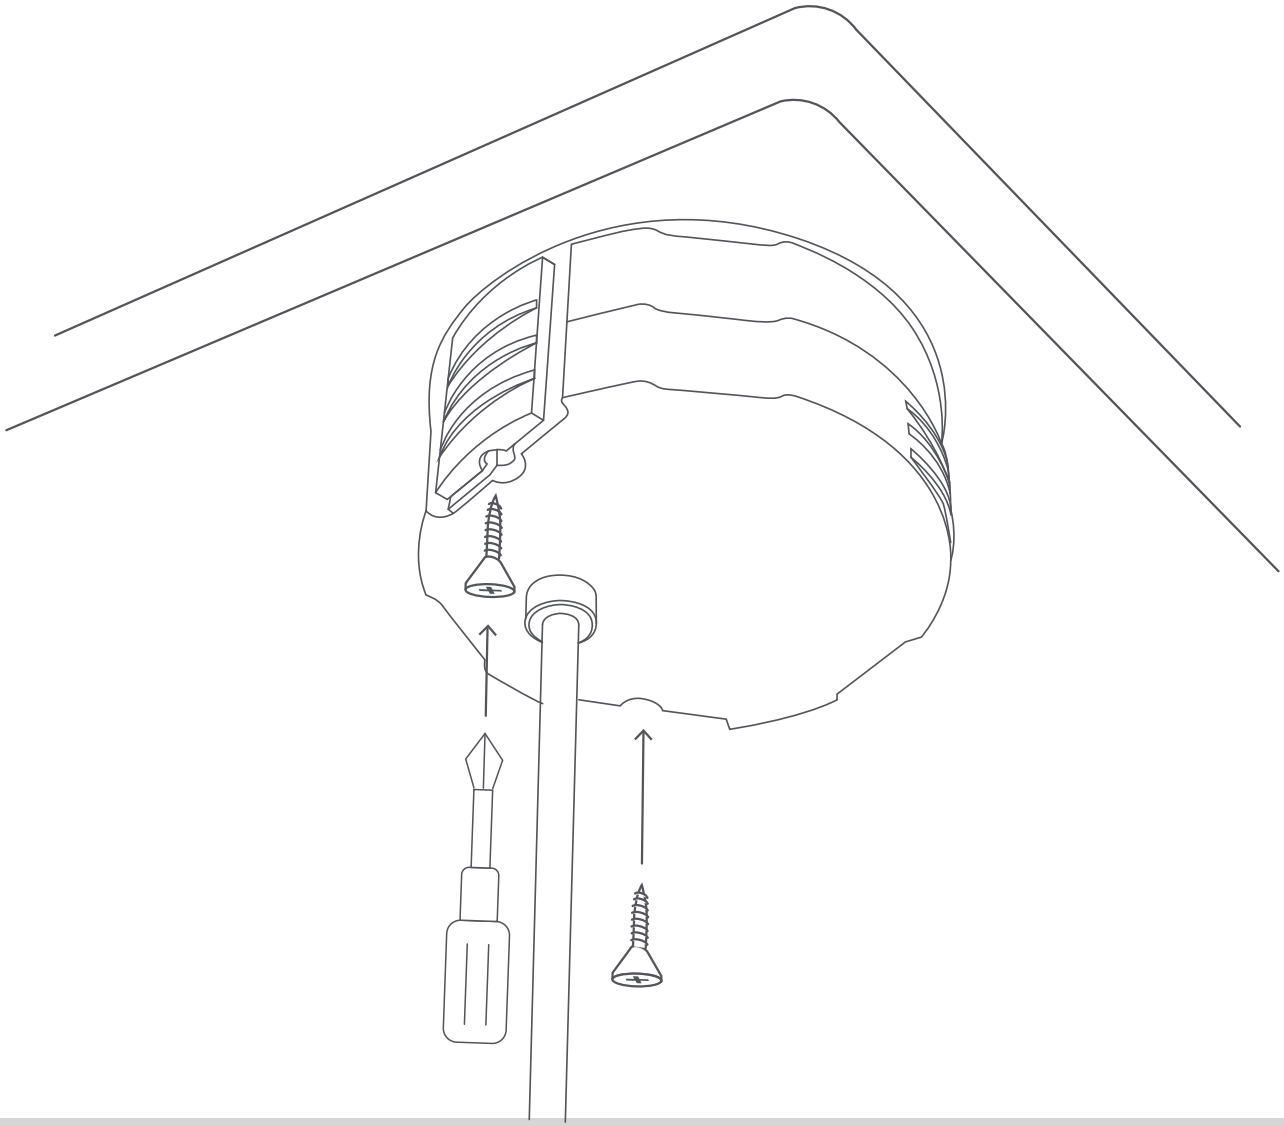


⑥ Use the two screws to fasten the PuK 4 in the opening.

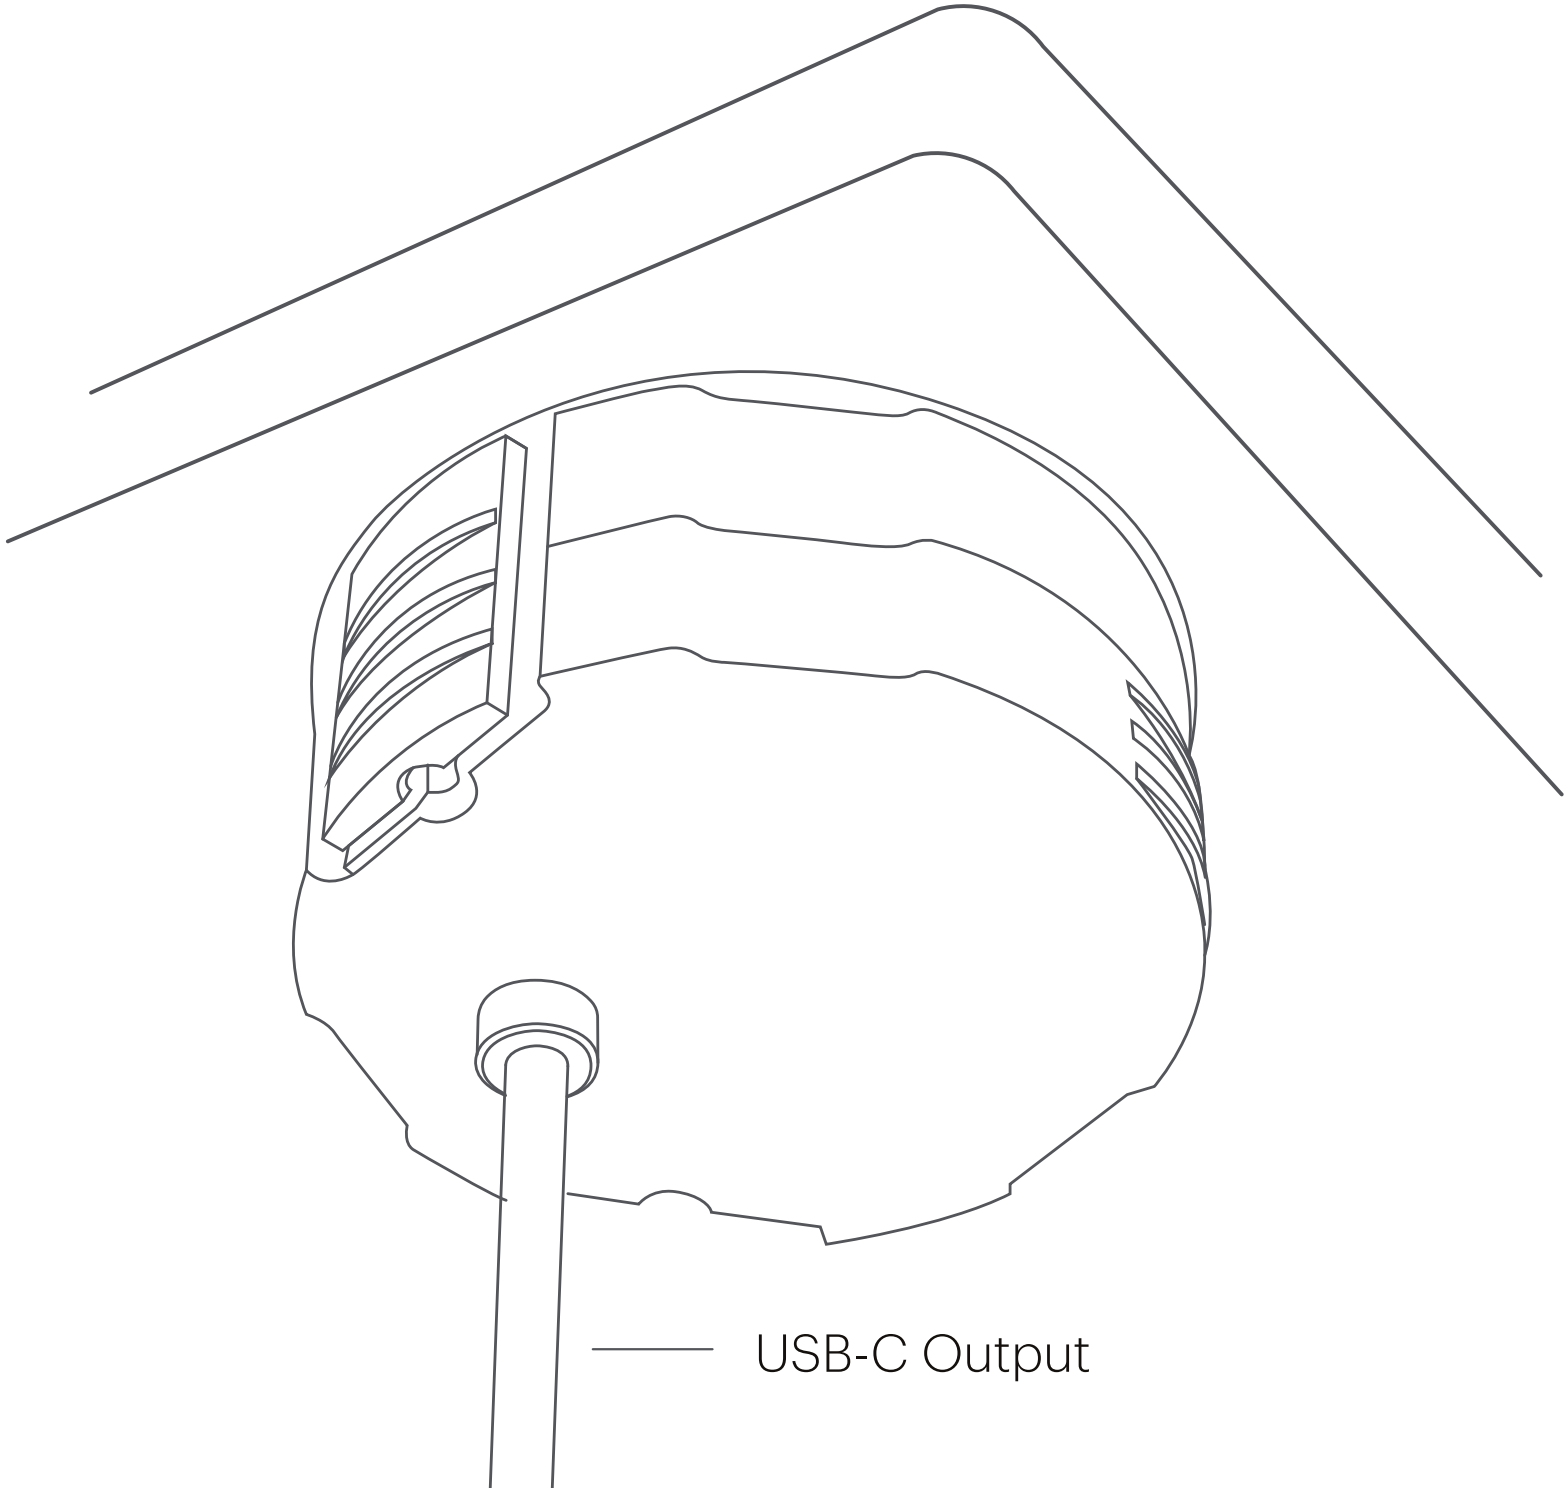
USB-C Output

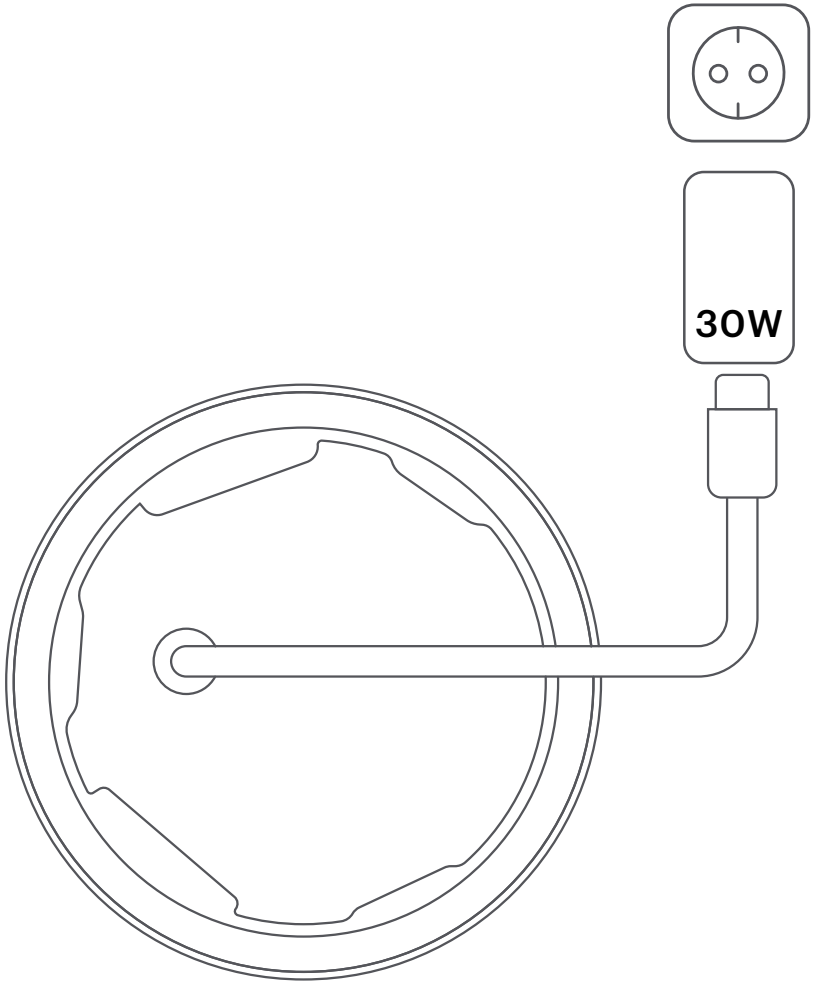

⑦ Insert the USB-C plug into the Included 30W adapter en plug this into your powersocket

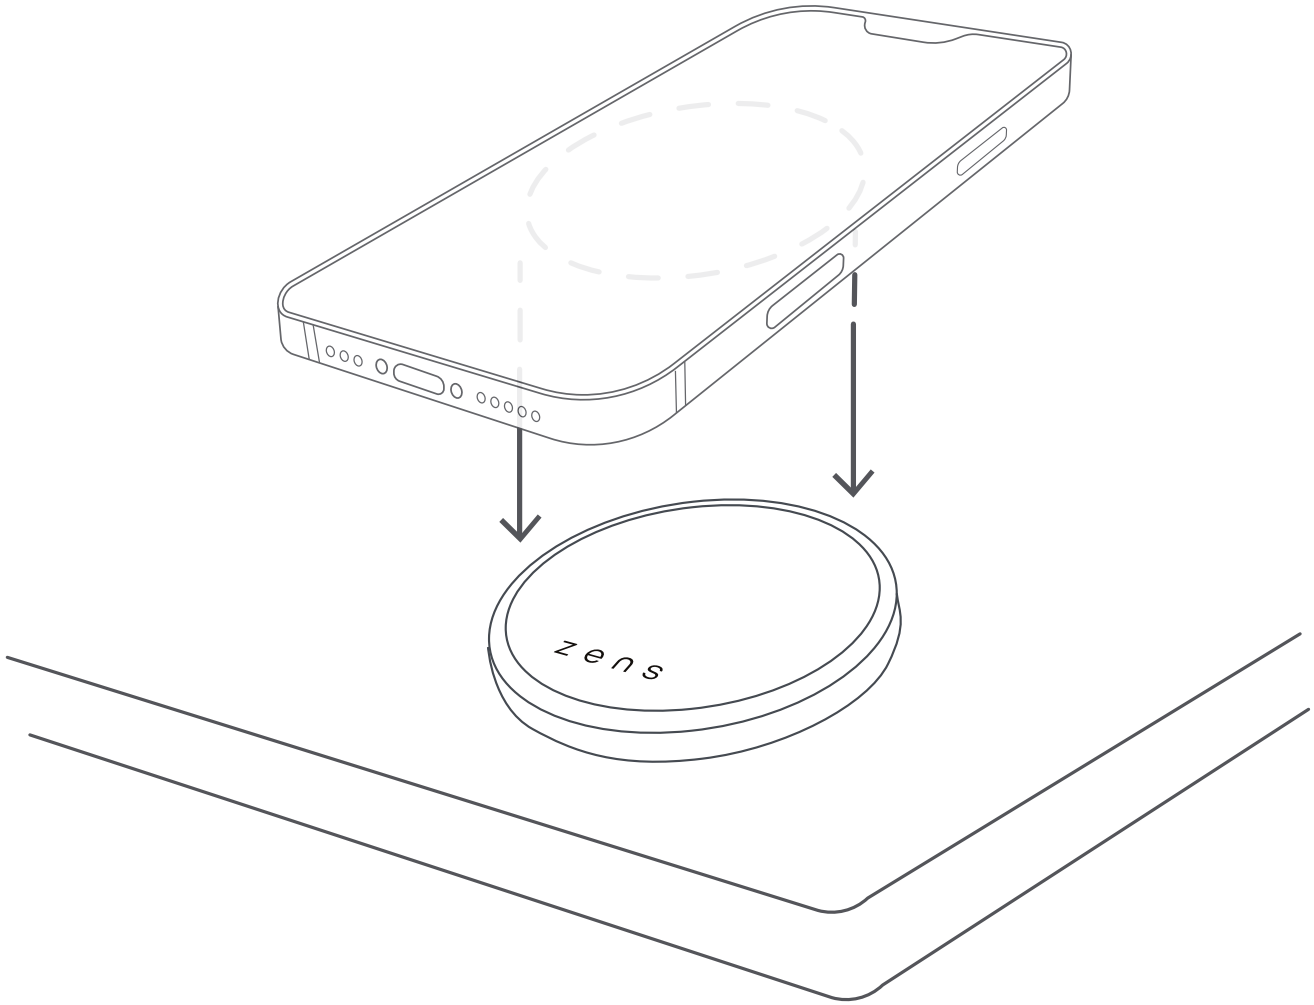

⑧ To start charging, place the Qi2 enabled device on the magnetic charging spot



Charge your Workspace

zens.tech